



выбирать **Расстояние** **DN** **л** **Д** **делать р т**

50	43	107	69	29	19
65	46	127	84	20	20
80	64	142	103	26	26
100	64	162	121	28	28
125	70	192	135	30	30
150	76	218	180	31	31
200	89	273	250	33	33
250	114	328	260	45	45
300	114	378	312	48	48
350	127	438	365	50	50
400	140	489	415	54	54
450	152	539	468	58	58
500	152	594	526	60	60
600	178	695	626	73	73