


Pneumatic eccentric hemispherical valve

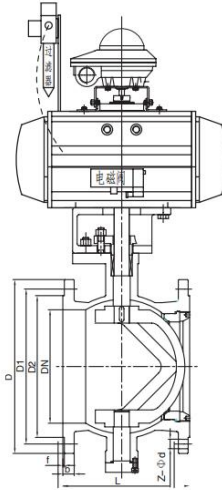

выбирать	Расстояние Ду(мм)	л	Д	Д1	Д2	Z- φd	б ж
40	165	145	110	85	4-18	18	2
50	178	160	125	100	4-18	20	2
65	190	180	145	120	4-18	20	3
80	203	195	160	135	8-18	20	3
100	229	215	180	155	8-18	22	3
125	254	245	210	185	8-18	22	3
150	267	280	240	210	8-23	24	3
200	292	335	295	265	12-23	24	3
250	330	405	355	320	12-25	26	3
300	356	460	410	375	12-25	28	3
350	381	520	470	429	16-33	30	3
400	430	580	525	480	16-30	32	4