


Pneumatic eccentric hemispherical valve

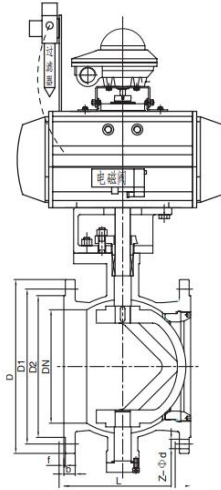

выбирать		Расстояние Ду(мм)		л	Д	Д1	Д2	Z- φd б ж
40	165	145	110	85	4-18	18	2	
50	178	160	125	100	4-18	20	2	
65	190	180	145	120	4-18	20	3	
80	203	195	160	135	8-18	20	3	
100	229	215	180	155	8-18	22	3	
125	254	245	210	185	8-18	22	3	
150	267	280	240	210	8-23	24	3	
200	292	335	295	265	12-23	24	3	
250	330	405	355	320	12-25	26	3	
300	356	460	410	375	12-25	28	3	
350	381	520	470	429	16-33	30	3	
400	430	580	525	480	16-30	32	4	